

Using the Epson Scanner to Scan a Slide or Film Negative



1. Place the image tray on the scanner, making sure that the correct corresponding tab fits onto the scanner bed. In this case, C for slides.



2. Load your negatives (A) or slides (C) into the tray labeled with white A and C boxes.

 
- Make sure the images are placed face down in the trays.
- When loading negatives in slots A, remove and replace the removable top piece and snap it back in place to sandwich the negatives in the tray.




3. Before closing the lid, remove the white panel on the inside of the lid by sliding it up and out.




4. Open the EPSON Scan app on the desktop.

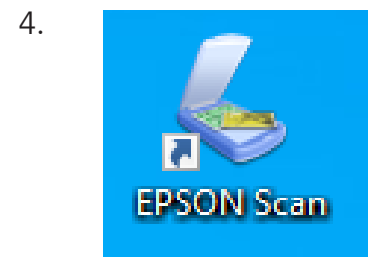

 5. Choose "Customize" and select "film" at the top of the options, then click "OK".

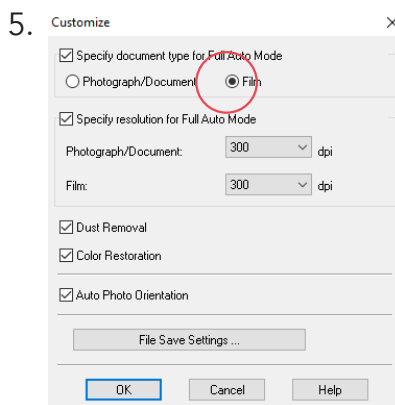

 6. Click on "Scan" to begin scanning your document.

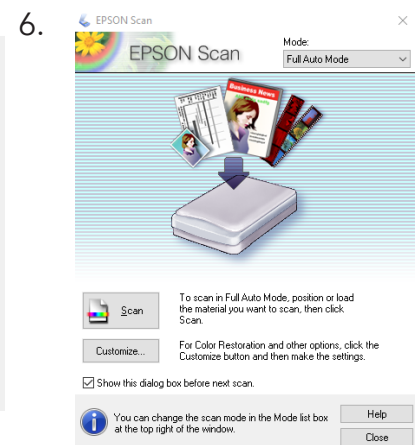

7. Your image will automatically save in the Pictures Folder, which will automatically pop up after the image is scanned.

8. Once finished, slide the white panel back into the inside of the scanner lid.